

INSTALLATION GUIDE

Factbird® DUO

Table of contents

Hardware & Software login

- Factbird® DUO hardware set up with digital sensor..... 01
- Factbird® DUO hardware set up with analog sensor..... 02
- Factbird® DUO hardware set up with PLC Cable..... 03
- Software set up - logging in to the software 04

 
INSTALLATION GUIDE

Factbird® DUO

Hardware Setup with digital sensor



① Factbird® DUO



② Digital sensor



③ Sensor cable



④ Power supply unit

1a


Connecting a digital sensor and cables

1. Connect ③ sensor cable to ② digital sensor and ① Factbird® DUO.
2. Connect ④ power supply unit to ① Factbird® DUO.
3. Plug into power and check if the ② sensor turns on.

2

Mounting at production line

1. Mount ② sensor.
2. Place the ① Factbird® DUO where it receives good networks signals.
Not inside the cabinet or metal box.
Not under or between big machines.

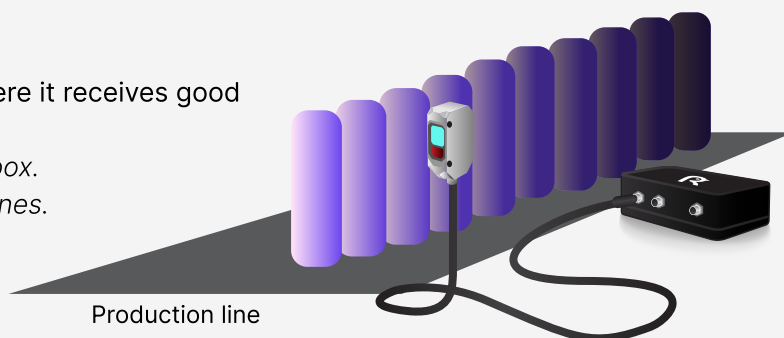

Production line


INSTALLATION GUIDE

Factbird® DUO

Hardware setup with analog sensor



① Factbird® DUO

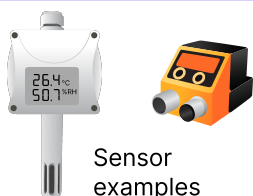

Sensor examples

② Analog Sensor
4-20 mA / 0-10V



③ Converter



④ Sensor cable x2




⑤ Power supply unit

1b

Connecting an analog sensor and cables


1. Connect one end of ④ sensor cable to ② analog sensor and the other end to ③ converter, ④ sensor cable and ① Factbird® DUO device on any of the two ports.
2. Connect ⑤ power supply unit to the power input on the ① Factbird® DUO device.
3. Plug into power and check if the display on ③ converter turns on.

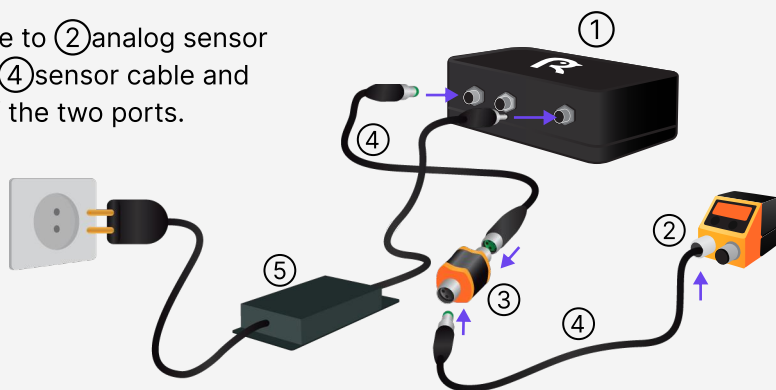

2

Mounting at production line

1. Mount ② sensor.
2. Place the ① Factbird® DUO where it receives good networks signals.
Not inside the cabinet or metal box.
Not under or between big machines.

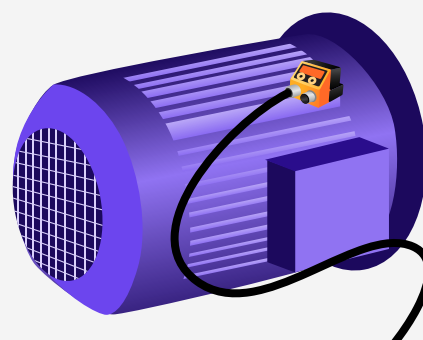


INSTALLATION GUIDE

Factbird® DUO


Hardware setup with PLC cable



① Factbird® DUO

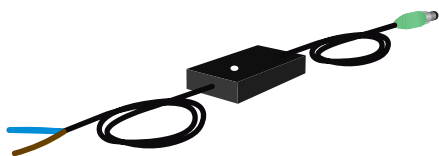

② Factbird® PLC cable

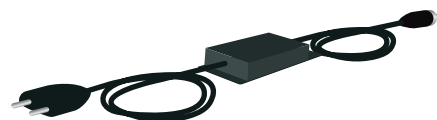


③ Power supply unit

1c

Connecting wires and cables


1. Find a 24V output signal that is high for every part produced and install the ② Factbird® PLC cable in parallel. e.g. PLC terminal of existing sensors for counting parts produced.
2. Connect ② Factbird® PLC cable to ① Factbird®.
3. Connect ③ power supply unit to ① Factbird® and plug into power.

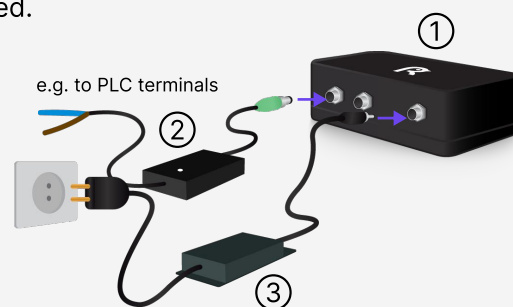

2

Check the connection

1. Place the ① Factbird® DUO where it receives good networks signals.
Not inside the cabinet or metal box.
Not under or between big machines.
2. The indicator light on ② Factbird® PLC cable starts blinking once it receives signal.

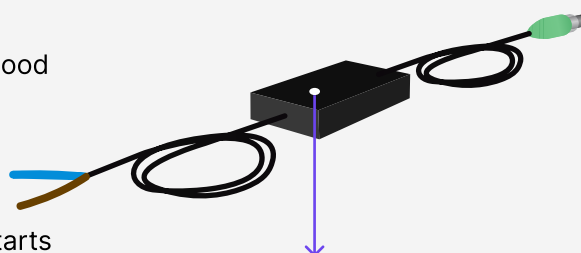

INSTALLATION GUIDE

Factbird® DUO

Software login

3

1. You'll receive a welcome email from Factbird.
2. Open the email and create your password according to the instruction in the email.
3. Log into the Factbird application and view your production data at: cloud.factbird.com



For more details, see the guide at factbird.com/resources/getting-started



How to make a short cut

For smartphone and tablet user, set Factbird icon on your home screen for quicker access.



1. Log in to cloud.factbird.com, tap the [Share](#) icon in the menu bar at the bottom.
2. Tap [Add to Home Screen](#) in the menu, and tap [Add](#) again.



1. Log in to cloud.factbird.com, tap the [three vertical dots](#) in the upper right corner.
2. Tap [Add to Home Screen](#) in the menu, and tap [Add](#) again.

